



ORBA

Les architectes de votre gestion DA

powered by



INTEGRATED
VENDING
SOLUTIONS



Widù

Quick installation guide

SIM Card insertion		LED Indication	
1 Open the box unscrewing the screws on the rear to access the SIM card	2 Insert the SIM card opening the holder as shown in figure Be sure to disable the sim card PIN	Line Fast blinking => Search line Slow blinking=> Line OK	Status ON => Initialization or in call OFF => Normal operation

Package content

Cable KIT
N. 1 Widù cable (STD o GT)
N. 1 Group cable

+

ASPO GT GRAY BOX OR **ASPO STD BLACK BOX**

WIDU'

Cable connections ASPO STD All connectors have a default wiring

Groups cable - colors table

Color	Function
Blue	Phase
Brown	Neutral
Yellow	220V AC - Input
Gray	220V AC - Output

Cable connections ASPO GT All connectors have a default wiring

Groups cable - colors table

Color	Function
Blue	Phase
Brown	Neutral
Yellow	220 V AC - Erogation request
Gray	Norm. Open

Connection example

Using ASPO GT

Using ASPO STD



ORBA

Les architectes de votre gestion DA

powered by



**INTEGRATED
VENDING
SOLUTIONS**



Widu

Quick Installation Guide

START UP STEPS

User Registration

1

In order to use the service a free registration on the portal is required.
Inserting your data will allow you to access the remote control system via web
Link: <http://widu.sistemivending.it/register.aspx>

Device Configuration

2

It's necessary to prepare and configure the telemetry module for data transmission to the web portal. This can be done through a dedicated program and a PC.
From the following link, <http://widu.sistemivending.it/login.aspx>
it's possible to download the software Download SV Manager (Software di configurazione USB)

Surfing through the dedicated web portal

3

Through the following link, <http://widu.sistemivending.it/login.aspx>, it's possible to connect to the web site for the OCS machines management.